

Gebrauchsanweisung für den Pogo-Stick

Bitte lese die nachfolgende Gebrauchsanweisung sorgfältig durch, bevor Du den Pogo-Stick benutzt.

1. Geeignet für Kinder ab 6 Jahren.
2. Bitte beachten Sie maximale Belastbarkeit:
Pogo-Stick rot: max. 30 kg Körpergewicht, Pogo-Stick blau: 50 kg Körpergewicht
3. Trage bei den Übungen immer einen Helm.
4. Turnschuhe sind in diesem Fall das geeignete Schuhwerk.
Benutze den Pogo-Stick niemals mit Sandalen, Ledersohlen oder Schuhen mit glatten Sohlen.
5. Benutze den Pogo-Stick nur auf freien Flächen ohne Hindernisse oder Personen mit denen Du kollidieren könntest.
6. Achte darauf, dass der Untergrund immer eben und fest ist.
Nasse, unebene oder glatte Oberflächen wie Kies, Erde, Gras oder Sand sind ungeeignet und beeinträchtigen die Funktion.
7. Wenn du mit den Übungen beginnst, starte langsam und halte den Stick immer senkrecht und möglichst nah am Körper.
Tricks können gefährlich sein!
Überschätze niemals Deine Fähigkeiten, denn die Sprungkraft mit diesem Hüpfstab ist nicht zu unterschätzen.
8. Kunststücke und Tricks sind möglich sollten aber mit großer Vorsicht und unter Anleitung geschehen.
9. Bei Verwendung durch junge Kinder empfehlen wir die Aufsicht durch einen Erwachsenen.


Pflegehinweise

1. Den Pogo-Stick niemals gegen kantige Hindernisse fallen lassen, denn die Beschädigungen des Rohres (Beulen) beeinträchtigt die Funktion.
2. Der Pogo-Stick wurde werksseitig gefettet und muss nicht nachgefettet werden.
Es ist normal, dass das Tauchbein immer mit einem leichten Schmierfilm überzogen ist.

Using the Pogo-Stick

Read the following instructions caerfully before using the Pogo-Stick.

1. Suitable from children from 6 years of age on
2. Use within riders-weight limits:
red Pogo-Stick: up to 30 kgs rider-weight, blue Pogo-Stick: up to 50 kgs riders-weight
3. Always wear a safety helmet when using the Pogo-Stick.
4. Always wear shoes with flat rubber soles when using the Pogo-Stick.
Do not use with sandals, leather soled shoes or other footwear that might slip off foot pegs.
5. Always use the Pogo-Stick in open spaces that are free from any obstacles or persons you could collide with.
6. Always use the Pogo-Stick on flat or level surfaces.
Do not use on uneven surfaces such as dirt, grave, grass and sand. Do not use on wet, icy or other slippy surfaces.
7. When starting to use the Pogo-Stick, focus on balancing and jumping straight up and down, perpendicular to the ground.
8. Stunts and tricks can be dangerous. Do not exceed your ability.
9. Serious injury may result from improper use, and by performing stunts. or tricks.
10. We recommend an adult supervision when young children use the Pogo-Stick

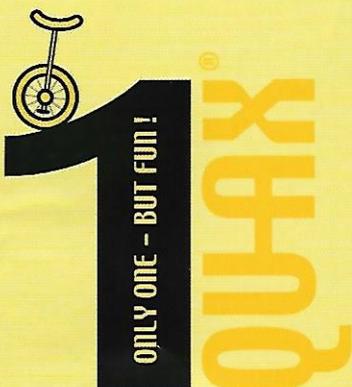

Maintenance and care

1. Be careful not to let the Pogo-Stick fall against any sharp objects. If the main tube becomes bent or deformed, it can severely affect the performance.
2. The Pogo-Stick was lubricated at the factory and does not require any further lubrication. It is normal to have a thin film of oil on the slider tube.

